


KARP ASSOCIATES, INC.
Installation Instruction
Sesame KSTE/CAD Door

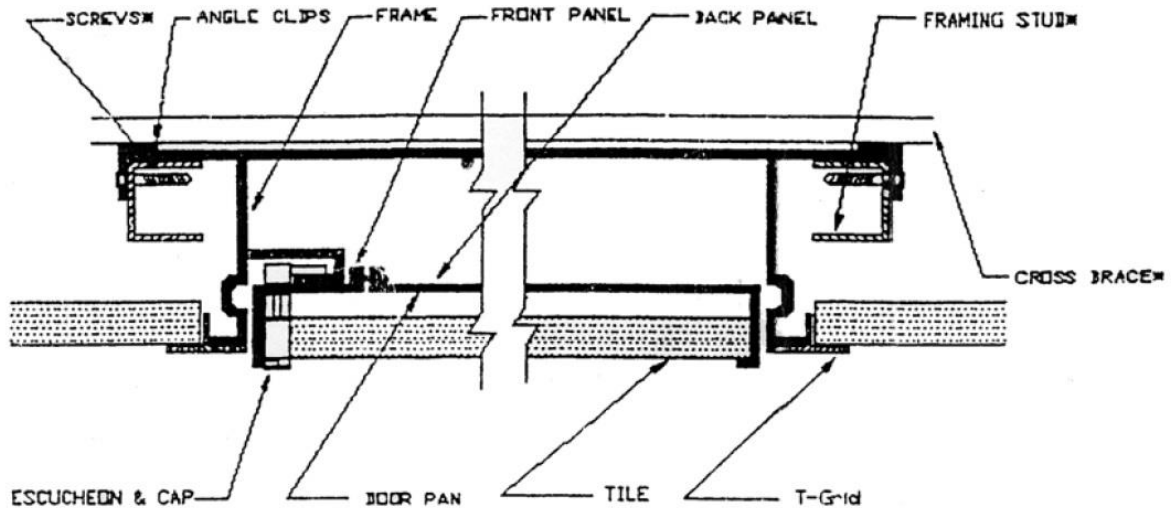

1. Remove the door pan from the frame for ease of installation. To remove the door pan from the frame unfasten the wing nuts on the outside of the frame and extract the rod (not shown).
2. Suspend the frame from the support channel (black iron) (shown) on both the hinge and lock side of the door, at a height sufficient to ensure the frame sits on the T-grid. The frame is attached to the support channel by screwing through the angle clips on the frame. If necessary for a secure installation, cross bracing may be needed to avoid racking of the frame. It is imperative for door operation that the frame be installed square.
3. Unscrew the front panel of the door pan from the back panel.
4. Install to the lock side of the door panel the supplied escutcheon with the two screws and two nuts. These parts can be found in a plastic bag attached to the back of the door.
5. Reassemble the front panel of the door pan to the back panel, insert the escutcheon cap and place the completed door pan assembly in the installed frame. Match the hinge bracket of the door to the holes in the frame to receive the rod. Insert the rod and fasten the wing nuts to secure the door to the frame.
6. The door is to be opened using the T-handle provided. On sizes larger than 12" X 12" a CAD (Controlled Action Device) has been installed. This allows the door to open 15 degrees after the key has been turned. Do not force the door open at this point; push the door up and pull it towards the lock side to release the CAD and allow the door to swing down freely. **NEVER PULL ON THE DOOR OR TILE TO FORCE IT OPEN.**

*Not supplied with access door